

Haier

Repair INSTRUCTION

Issue Date(y-m-d)	2017-12-12
RIN.	RINFL2017121201
Factory Division	Jiaonan Haier washing machine
Editor	Yu Liangchao
Tel	86 532 85197767
E-mail	Yuliangchao.jnxyj@haier.com

APPLICABILITY

ITEM	CONTENT
PRODUCT	Dryer
MODEL SERIE	HD80-79-F /HD80-B636W/HD80-03D-E/DE8060P2/HDC80E1/DE8060P1/DH8060P1
MODELS	HD80-79-F /HD80-B636W/HD80-03D-E/DE8060P2/HDC80E1/DE8060P1/DH8060P1
SNs fromto.....	<u>Production date from Dec 7th,2017</u>
DESCRIPTION	How to repair the noise issue of dryer

ITEM	INSTRUCTION
------	-------------

Overview and Tools

If customer complains there is noisy, please dispatch a technician to repair for customer.
Tools: Roller(SUPPORT WHEEL PARTS),
part no. 0180800201A
(with remark **S******* on it,
for example: SH1128)
Notice: Only the roller with the remarks could be used for
Repair. The parts without above remark could not be used.



Explanation Instruction

1. Unscrew 2 screws which fixed the work top, then remove the work top. (Fig A)



Fig A

2 . Unscrew 2 screws on the control panel. Then take out the water box and unscrew the 2 screws as showing in Fig B.



Fig B

3. Remove the front panel and plate. Then you will find the roller(SUPPORT WHEEL PARTS),replace it with a new roller (0180800201A) .(Fig C)

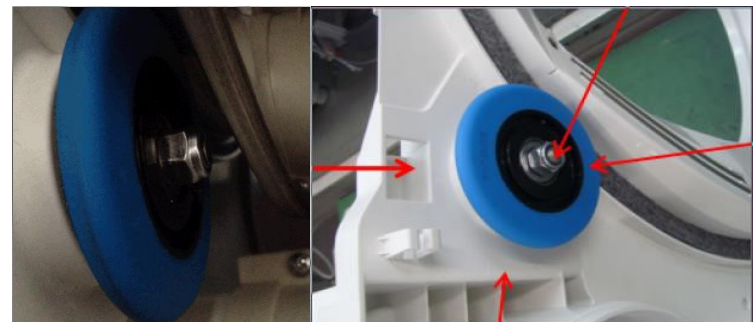


Fig C

4. Assemble the dryer, and run a program to see if the noise is disappearing.

Suitable for model:

Product code	Model
CF0622E0H00	HD70-01
CF0624E0H00	HD70-01
CF0621E0H00	HD70-01
CF0621E0H00	HD70-01
CF0651E0H00	HD70-03D-E
CF0651E0H00	HD70-03D-E
CF065AE0H00	HD70-79
CF0657E0H00	HD70-79
CF065CE0H00	HD70-79
CF0653E0H00	HD70-79
CF065BE0H00	HD70-79-F
CF0671E0M00	HD70-A82
CF0681E0M00	HD70-A82-DF
CF0680E0M00	HD70-A82-F
CF0623E0H00	HD80-01
CF0623E0M00	HD80-01
CF0620E0M00	HD80-01
CF0625E0H00	HD80-01-F
CF0627E0H00	HD80-01-S
CF0627E0H00	HD80-01-S
CF0621E0G00	HD80-01-U
CF0621E0G00	HD80-01-U

Product code	Model
CF0655E0H00	HD80-03DBL-F
CF0652E0H00	HD80-03D-E
CF0670E0H00	HD80-26A-F
CF065GE0H00	HD80-79
CF0656E0H00	HD80-79
CF0659E0H00	HD80-79
CF0650E0200	HD80-79
CF0650E0M00	HD80-79
CF0658E0H00	HD80-79-F
CF0650E0G00	HD80-79ME
CF0683E0M00	HD80-A82
CF0685E0M00	HD80-A82
CF0670E0M00	HD80-A82
CF0682E0M00	HD80-A82
CF0686E0M00	HD80-A82-DF
CF0684E0M00	HD80-A82-F
CF0676E0H00	HD90-79A

CF0673E0H00	HD90-79A
CF0672E0H00	HD90-79A-F
CF0654E0H00	DE8060P1
CF065HE0H00	DE8060P2
CF065KE0H00	HDC80E1